


ROTOVAC 360 SHROUD REMOVAL/INSTALLATION

- 1) Lay machine back onto its handles so that head faces outwards and remove cleaning head.



- 2) Locate and remove the five thumb screws on top of shroud and remove the grab handle.

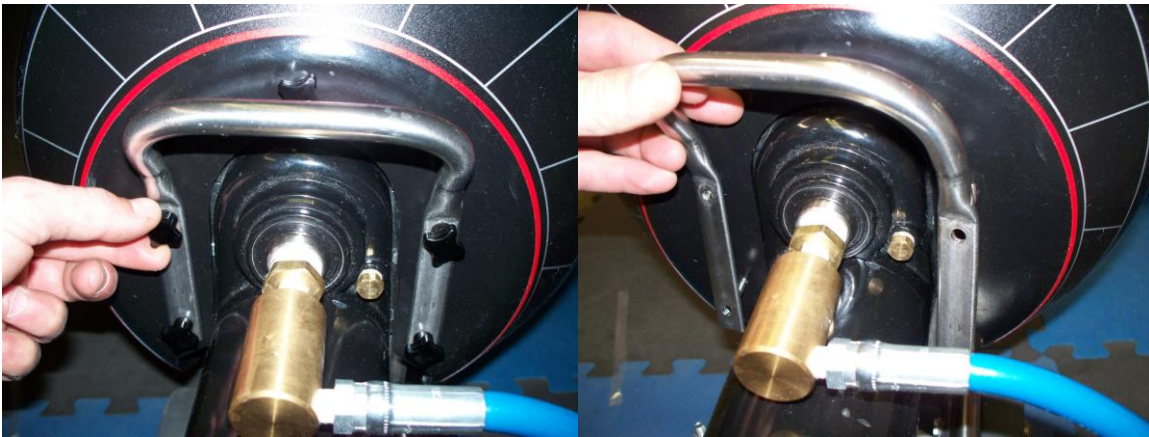

- 3) Remove shroud by gently freeing it from the shroud screws, tilting at a 45 degree angle and lifting upwards.

